


## Technical Specifications

Materials	Mild Steel
Connections	½" Flow and Return
Test Pressure	8 Bar
Testing Authority	EN442
Max operation pressure	4 Bar
Max working temperature	95c

*These can be cleaned using a soft damp cloth with a non-abrasive cleaning product.*



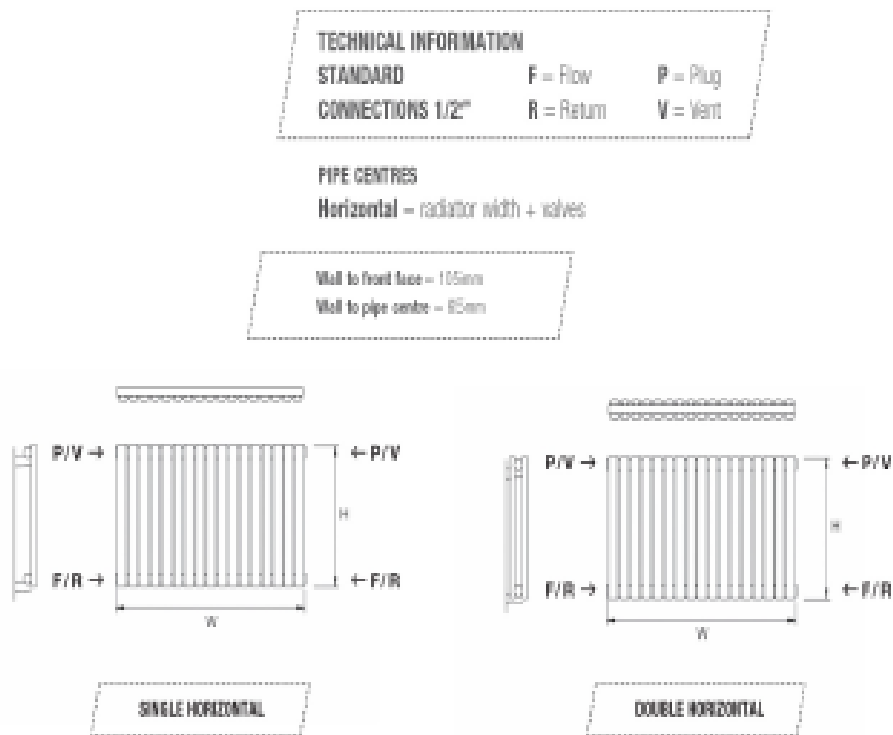


PLEASE NOTE: That in accordance with Part L1 2006 of the Building Regulations and BS7593:1992 code of practice for the treatment of hot water and central heating systems, we recommend flushing the heating system before installation of new radiators and then adding the correct quantity and type of inhibitor for use with the radiator and system to prevent corrosion. Damage caused to systems not protected by a suitable inhibitor will not be covered by the manufacturer warranty. It is the responsibility of the installer to ensure the correct use and suitability of the fixings provided. No liability for costs or damages arising from failure to do so can be accepted.


Radiator Installation Instructions

- Review instructions carefully before installation
- Installation should be completed by a suitably qualified person
- Please dispose of packaging in a responsible manner

tools required

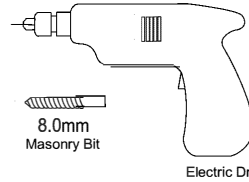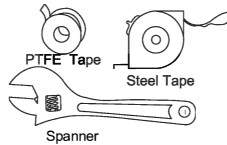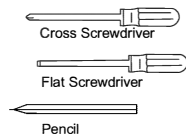


Optional parts

 

Contents List				
Ref	Icon	Description	QTY	
1		Plug	1	
2		Air Vent	1	
3		Masonry Wall Plug	8	
4		Long Screw	8	
5		Hook	4	

**A**



1. Install 1 (plug) and 2 (air vent) in the right position. (figure I)

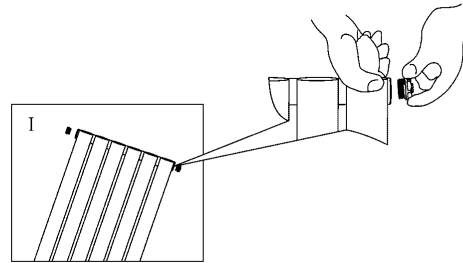

**ATTENTION:** To avoid accident, PLEASE fasten the thread exactly.





**B**

1. Choose an appropriate position and mark the fixing points with a pencil.

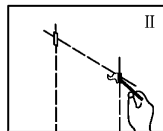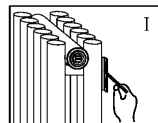


**C**

    1. Drill a hole on the marked place by 08mm electric drill. (Figure I)
2. Insert 3 (Wall Plug) into the 08mm hole. (Figure II)
3. Place 4 (Long Screw) through 6 (Shim) and 5 (Hook), tighten it into the 3 (Wall plug). (Figure III)




**ATTENTION:** Do not fix the bottom hooks completely because the position of towel warmer will be adjusted while installing.

**D**

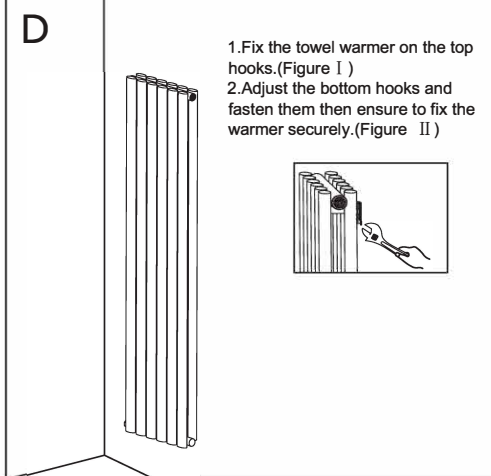


1. Fix the towel warmer on the top hooks. (Figure I)  
2. Adjust the bottom hooks and fasten them then ensure to fix the warmer securely. (Figure II)

**E**

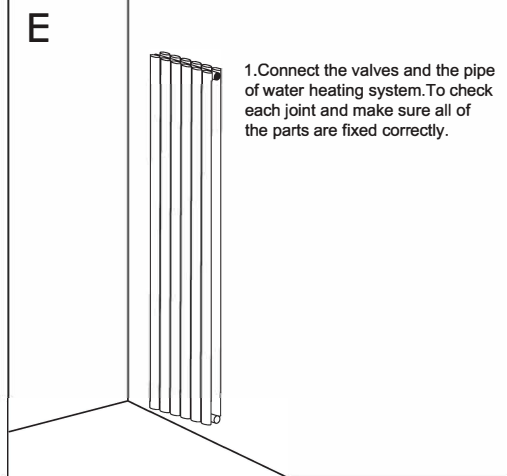

1. Connect the valves and the pipe of water heating system. To check each joint and make sure all of the parts are fixed correctly.

**F**

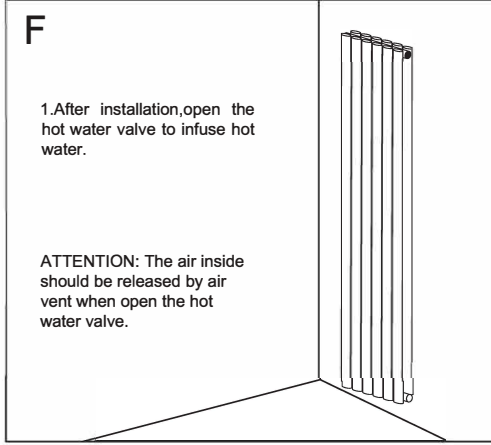

1. After installation, open the hot water valve to infuse hot water.

**ATTENTION:** The air inside should be released by air vent when open the hot water valve.

**After installation . . .**

- Use a screwdriver to open the air vent, open the valve and let the water rush into the towel warmer. Check all connections for leaks.
- Once water overflows from the air vent, there is no air in the tube.
- Use a screwdriver to close the air vent, turn on the valve and the towel warmer is ready for use.

**After care**

- Classic towel warmers are made from steel with chrome plating, and should not be cleaned with corrosive or scouring cleaning agents.

**Please note . . .**

- This product can only be used at  $PN \leq MPa$  (10g/cm<sup>2</sup>, 10 Bar), It should only be filled with water, and at a temperature below 100 °C (212 °F). See table below for installation requirements.
- If the temperature exceeds 48 °C (or 120 °F), please show a warning sign near the product to avoid burning and scolding accidents.

Fill <sup>3</sup> / <sub>4</sub> Full	Pressure	Temperature	Comments
water only	$PN \leq 1MPa$	$0^{\circ} C < t \leq 100^{\circ} C$	If ambient temperature drops below 1 °C, drain out the water to prevent freezing.