 
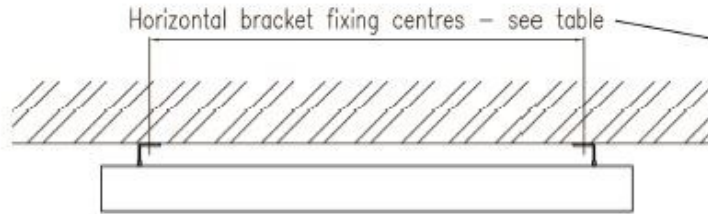 


The Radiator Centre


Heat By Design

Radiator depth details	
Radiator Depth	Wall to radiator front face
50	75
95	120

Ensure you leave at least 100mm above radiator free of obstructions to airflow

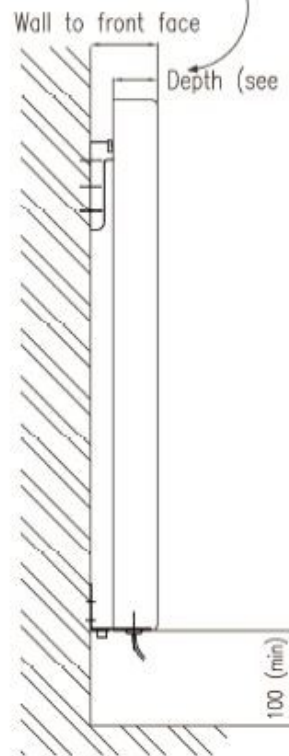

Radiator Length	Bracket fixing centres
240	130
460	350
700	590
1050	940
1100	990
1600	1490
2100	1990

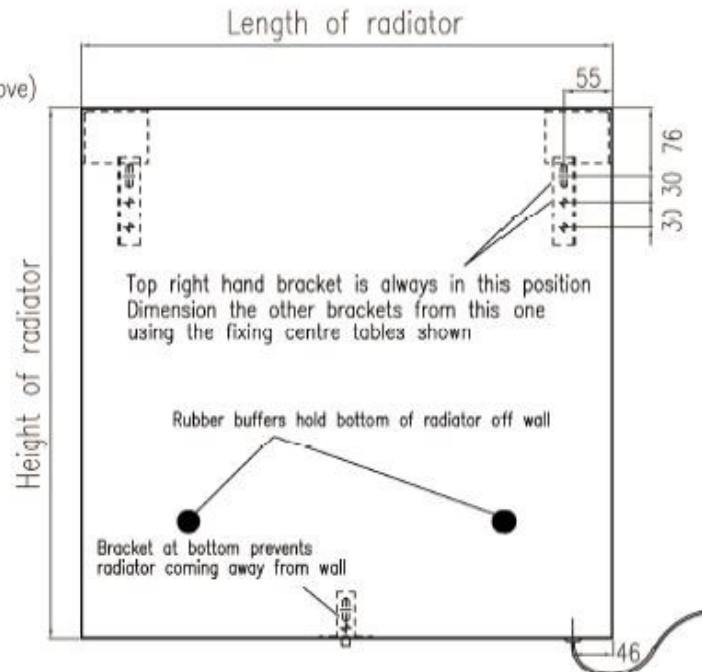 

Power flex exits through a gland on the bottom right hand face of the radiator but the flex can be pulled back through the gland to exit directly behind the radiator. Fused spur can be located therefore directly behind the bottom right hand corner of the radiator

Head Office

The Radiator Centre, 7 Holywell Hill, St Albans, AL1 1EU

Tel: 01727 840344

St Albans. Brighton. Islington. Clapham. Leamington Spa.