


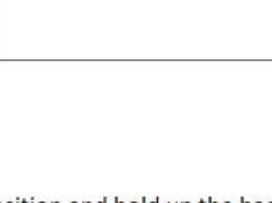


Horseshoe Cubed Horizontal Radiator

INSTALLATION AND FIXING

| | | |
|---|--|---|
| <p><u>FIXING</u> The towel rail is supplied with 4 brackets consisting of:</p> <p>4 x Pairs of Bracket Clamps 1 x Bleed Valve 4 x Wall Brackets 1 x Plug 4 x Fixing Screws</p> | |  |
| <p>Step 1:</p> | <p>Place both clamps around vertical collector tube (the finger side on the inside of the rail) and bolt into place. *Note* The Bracket clamps can be positioned anywhere on the collector tubes, however we recommend 2 tubes from the bottom and 2 tubes from the top.</p> |  |
| <p>Step 2:</p> | <p>Place the bracket sleeve of the clamps and bolt into place.</p> | |
| <p>Step 3:</p> | <p>Offer up the radiator and mark on the wall the desired position for the brackets sleeves.</p> |  |
| <p>Step 4:</p> | <p>Remove the bracket sleeves.</p> | |
| <p>Step 5:</p> | <p>Fix the sleeves to the marked positions on the wall and ensure that the brackets are level to ensure a vertical alignment for connecting the pipework.</p> | |
| <p>Step 6:</p> | <p>With the bracket sleeves fixed and level and the clamp heads fixed to the collectors hang the radiator. Secure the clamp heads to the sleeve. Insert screws provided and tighten with hex key.</p> |  |
| <p>Step 7:</p> | <p>Fit the bleed valve and the plug into the holes provided. Making sure not to over tighten</p> | |
| <p>Step 8:</p> | <p>The towel rail can now be connected to the central heating system and bled via the bleed valve</p> | |

ADDITIONAL INFORMATION

If you are fixing your radiator to a stud wall, you should place the radiator in the desired position and hold up the back plate in position and mark through the fixing holes to a secure position.

Head Office

The Radiator Centre, 7 Holywell Hill, St Albans, AL1 1EU

Tel: 01727 840344



St Albans. Brighton. Islington.
Clapham. Leamington Spa.

Horseshoe Cubed Horizontal Radiator

| | |
|------------------------------|-------------------------------|
| Wall to Pipe Centre= 70-75mm | Wall to Front Face= 107-112mm |
|------------------------------|-------------------------------|

Standard Connections 1/2"
F = Flow
R = Return
P = Plug
V = Vent

Pipe centres
 = radiator width - 36mm

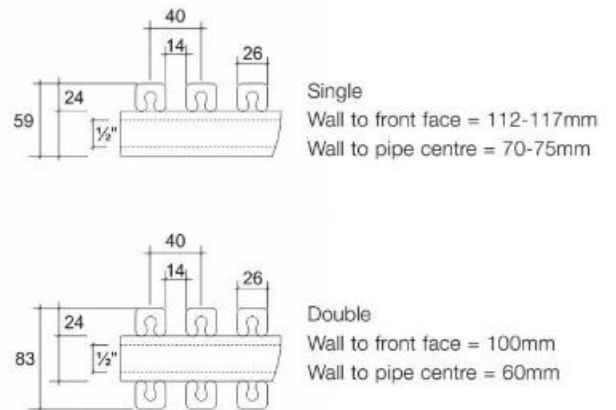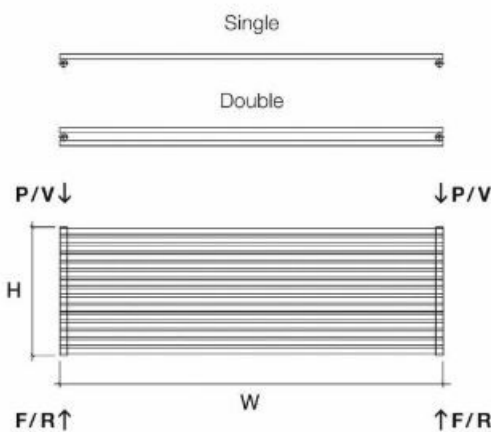

| | |
|-------------------------|---------------------|
| Materials | Steel |
| Connections | 1/2 Flow and return |
| Test pressure | 6 Bar |
| Testing authority | EN442 |
| Max operation pressure | 4 Bar |
| Max working temperature | 90c |

Head Office

The Radiator Centre, 7 Holywell Hill, St Albans, AL1 1EU
 Tel: 01727 840344

St Albans. Brighton. Islington.
 Clapham. Leamington Spa.