



INSTRUCTIONS FOR THE MOUNTING OF A VERTICAL RADIATOR

For a correct installation of vertical radiator it is necessary to make these operations:


1. Open the box and check where there are the brackets for the fixing of the radiator.
2. Take off the plastic protections in the connections.
3. Screw the 2 connector of valve and lockshield to the radiator.

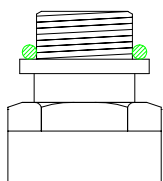

4. Take the radiator and you put it in the position of the installation. You sign in the wall the 4 points in the middle of the next to last of elements and in the middle of the horizontal pipe.

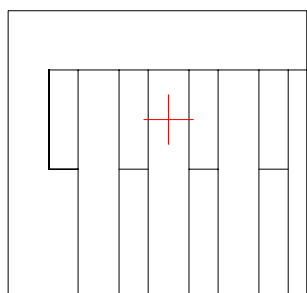

5. Put off the radiator and make 4 holes where there are the 4 points.
6. Fix the 4 brackets in the wall with the screws for the characteristic wall.

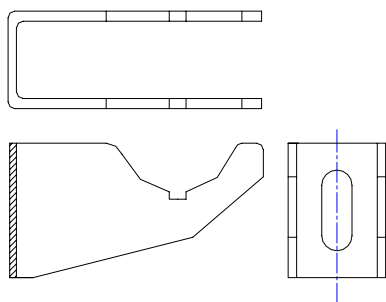


7. Connect the valves with the pipes of the plumber system.

TUBES

www.tubesradiatori.com

8. Take on the radiator and hook the radiator with the brackets. Connect the radiator with the valve and the lockshield.

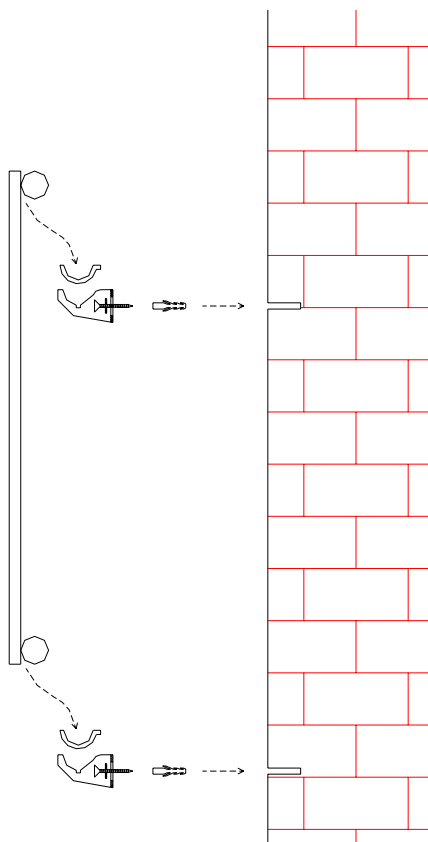

9. If a radiator is small the brackets are only 3.
10. Fill in the radiator with hot water and make the air breathing radiator.